vtech

i 5867 5.8GHz SYSTEM QUICK START GUIDE

This guide will help you set up your **i 5867** system. For complete Instructions, please consult the **i 5867** User's manual

Handset and Base Unit Layout

Installation of Battery Pack in Handset

1. Remove the battery cover by pressing on the indentation and sliding downward.
2. Place the new battery cells in the Handset with the metal contacts aligned with the charge contacts in the battery compartment.
3. Replace the battery cover by sliding it upwards.

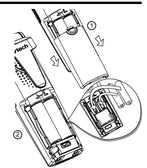

Setup of the i 5867

1. Plug the AC power adapter into an electrical outlet, and the DC connector into the bottom of the Base Unit.

2. Place the Handset in the Charge Cradle and allow it to charge for 12 hours.

BEFORE USING YOUR i 5867, CAREFULLY PEEL OFF THE PROTECTIVE FILM COVERING THE DISPLAYS.

Connecting to the Telephone Line

Plug one end of the telephone line cord into the jack on the bottom of the Base Unit. Plug the other end of this cord into the wall jack.

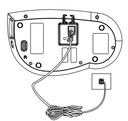

Checking for Dial Tone

After the battery is charged, pick up the Handset and press **ON. PHONE ON** should appear on the screen, and you should hear a dial tone.

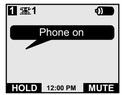

Setting the Time

Incoming Caller ID/Call Waiting ID will set the clock automatically. If you wish to set the time manually:

1. Make sure the answering system is on.
2. Press **TIME/SET**. The system will announce the current clock setting, then announce "*To set date and time, press* ***TIME/SET.***"
3. Press **TIME/SET**.
4. Press **CHANGE** until the system announces the correct day, then press **TIME/SET.**
5. Press **CHANGE** until the system announces the correct hour, then press **TIME/SET.**
6. Press **CHANGE** until the system announces the correct minute, then press **TIME/SET**. The system announces the current clock setting.

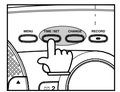

NOTE: You can press and hold **CHANGE** to advance the minutes in increments of ten.

Making Calls from the Handset

Predial - With the Handset Off, dial the number. If you make a mistake, press left NavKey (◀) to backspace. Press **ON** or **SPEAKERPHONE** to call your predialed number.

Traditional - Press **ON** or **SPEAKERPHONE**. After hearing a dial tone, dial the desired number.

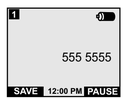

Answering Calls from the Handset

Press **ON** or any number key to answer a call.

Press **SPEAKERPHONE** to answer using the handsfree option.

Hold and Mute

Press the **HOLD** soft key to temporarily suspend the conversation. Press **ON** to return to the call.

Press **MUTE** to mute the microphone. You can still hear the other caller. Press **MUTE** again to return to the two-way conversation.

Pictures

Your **i 5867** is preset with the following number of images:

Images – 18 images
Emotions – 9 images
My Pictures – 0 images
CD ROM – 25 new images

You have the ability to assign one image as your background for the idle screen (wallpaper) or assign a specific image to a phonebook directory in the available 50 directories.

Set a Wallpaper image

To set a wallpaper image, select the icon **Pictures** in the main menu. Then choose an image in one of the three (**My Pictures**, **Images** or **Emotions**) menu options. Once you have selected the image, press the SET softkey to set the image as your wallpaper. You will receive a message on the screen confirming **Wallpaper Set!** and an audio confirmation.

Clear a Wallpaper image

To clear a wallpaper image, select the icon **Pictures** in the main menu. Select **Clear Wallpaper** using the NavKeys. Then press the middle NavKey or left softkey to clear the wallpaper.

Picture Download

Download Your Own Image
Do you have a favorite image stored in your personal computer that you would like to use as your **i 5867** Handset wallpaper or to assign to one of your 50 available phonebook directories? Using the provided Image Editor Software, you can view and convert your image. Once you have selected your file and viewed your image in the software, use the included USB cord to send the converted image directly into the Handset. You'll start by downloading the software into your computer.

One-Time Software Installation

1. Insert the enclosed Image Editor Software into your personal computer.
2. You will see a pop-up window giving you three options:
   a. Install/Uninstall the Image Editor Software.
   b. Browse the installation CD.
   c. Visit Vtech on the web.
   To install the software, click on the **Install/Uninstall the Image Editor Software** icon and follow the download instructions.
3. After the installation process is complete, you will find an **Image Editor Software** icon on your PC desktop. Click on this icon to run the Image Editor software.

Image Download

Once you have installed the software, follow these steps to view and convert your selected image.

- Click on the **OPEN** (open) icon. Then the pictures in the accompanied CD-ROMDisc can be found automatically. Or navigate to the direc tory where your desired image file is stored, and open the file.
- You will see your image displayed in the middle of the screen and inside the telephone display on the right. You can select the following options to edit your image:

- Zoom In and Zoom Out

96-5652-30-00
ISSUE 0

- Rotate Left and Rotate Right

- Adjust Brightness and Contrast

- Adjust Color

- Before downloading your image, make sure that the provided USB cord is correctly installed into your computer (using the large end of the connector) and Handset (using the small end of the connector). After you have completed the image editing process, press **Send to Phone** and your image will be downloaded into the Handset. Within a few seconds, you will see the new image displayed on your Handset and it will be saved in your **My Pictures** directory. You have the option to either **SET** (set the picture to be wallpaper) or **DELETE** the downloaded image. You can have a total of 14 images stored in the **My Pictures** directory. You can delete the preset images in this directory to make room for more if you wish. Additional image samples can be found on the accompanying CD-ROM.

NOTE: Do not leave the USB cord connected to the Handset for an extended period of time as it will drain the battery cells.

NOTE: All preset images in **My Pictures** can be deleted and replaced by new ones. You can store a total of 14 images in **My Pictures**.

Recordable Ringer

Record a Ringer

You can easily record a unique ringer to be used as either your Default Ringer or for a Distinctive Ringer assigned to a specific phonebook directory. You can record with either the provided Audio Patch Cord (not the USB cord), or with the Handset microphone. You may record up to 9 unique ringers for a maximum of 10 seconds each.

Cued-up music typically produces the best sounding recorded ringer. It is recommended to begin recording your ringer at the beginning of a song, rather than a portion from the middle to produce an audibly pleasing custom ringer.

Note: Your **i 5867** Handset is preset with many musical ringer options (i.e. Jazz, R&B, Reggae, Rock, etc) for you to use as your default ringer or a distinctive ringer. Three of them are protected, you can't replace them.You can replace the other 6 preset ringers with your own. You can also record your own ringers in another 3 blank locations in My Clips. You will find 10 additional sound clips excluding those preset in the Handset on the accompanying CD-ROM.

Recordable Ringer

To record a ringer, follow these steps:

- Select the **Sounds & Alerts** icon in the Main Menu.
- Select the **Sound Clips** icon
- If you are using the Audio Patch Cord, insert the 3.5mm plug (the larger end) into the headset jack of your PC or audio source. Insert the 2.5mm plug (the smaller end) into the Headset jack on the side of the **i 5867** Handset.

You can listen to the playing music through your Handset speaker after connecting the Audio Patch Cord and selecting the **Record Preview** menu option. Adjust the recording volume at the audio source. To begin recording, press **RECORD**. If you want to use the Handset microphone to record ringers, select the **Record Clip** menu option. After the beep, and with the Handset microphone facing the audio source, start recording.

NOTE: If the memory is full, the Handset will prompt **Clip memory full!**

- Hit the **STOP** softkey stop the recording.
- After recording, you may **PLAY** or **SAVE** the melody. If you choose **SAVE**, you will be prompted to Enter Clip Name. Enter a name (up to 8 characters) for the recording. If you make a mistake, press the softkey to backspace. Press **SAVE** to confirm. **Clip has been saved** will display. The melody will be stored in the **My Clips** section. You can listen to all of your recorded musical ringers in **My Clips**. If you want, when in My Clips, you can press **DELETE** then **YES** to erase one of them.

NOTE: When you want to use the Handset microphone to record ringers, do not insert the Audio Patch Cord into the headset jack.

Sound Select

During a call, you can adjust the quality of the sound to best suit your hearing. Pressing **SOUND SELECT** repeatedly will cycle you through four different frequency responses:

BASS - Low Frequency sounds enhanced

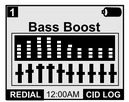

MID - Mid-Range sounds enhanced (This is the recommended setting for hearing aid users.)

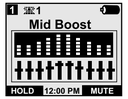

TREBLE - High Frequency sounds enhanced

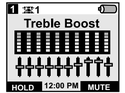

NATURAL - No frequency enhancement (Your Handset is preset with this selection)

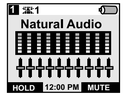

Redial

Press **REDIAL** to display the last **10** telephone numbers dialed from the Handset. The number on the top line represents the last number dialed.

- Use the ▼ and ▲ NavKey to highlight the desired number.

- To dial, press **ON/FLASH** or **SPEAKERPHONE.**

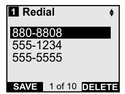

Caller ID/ Call Waiting ID - Handset

View Caller ID/Call Waiting ID records by pressing the **CID LOG** softkey. Use the ▲ and ▼ NavKeys to review the records.

Dialing from CID - If the CID record displayed is in the correct format for dialing, press **ON** or **SPEAKERPHONE** to dial your call. If it is not in the correct dialing format, press middle **Navkey**. With each press of # key, you will see **4** possible dialing formats, such as:

Scroll to the desired option, then press **ON** or **SPEAKERPHONE** to dial the number.

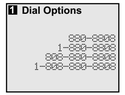

Storing a Name and Number in Phonebook Memory

1. Enter the phone number you wish to save into the Handset. Press the **SAVE** softkey.
2. Using the keypad, enter the desired name. Press the left softkey to backspace, use right NavKey to insert a space.
3. Press **OK** then **SAVE** to store your entry.

Dialing from the Phonebook

1. Press any NavKey then **OK** to enter the Phonebook.
2. Use the up and down NavKeys to scroll to the desired entry.
3. With the desired record displayed, press **ON** or **SPEAKERPHONE** to dial the number**.**

04/04/23, 16:43

Registration and Operation of the Accessory Handsets

Your **i 5867** system can operate up to **8** Handsets. Accessory Handsets (models **i 5803** or **i 5807**) are sold separately. To order accessory Handsets, replacement battery cells or Headsets, call VTech Communications Inc. at 1-800-595-9511

The original Handset that is shipped with your i 5867 system is already registered to the Base Unit. The steps below will assist you in registering additional Handsets as you expand your system.

After charging the Handset, if it displays **SEARCHING FOR BASE** or **ENTER BASE ID ###**, you must register the Handset in order to use it. If the display says **SEARCHING OR BASE**, press **NEW**. The screen will now display **ENTER BASE ID ###**. Now, follow these steps:

1. Find the **BASE ID Code** on the underside of the Base Unit.
2. Enter the 15-digit **BASE ID Code** into the Handset. If you make a mistake, press the left NavKey (◀) to backspace or the right softkey (▶) to erase a character.
3. Press **OK** to complete the registration process.
4. Within 15-60 seconds, the Handset will display **FOUND BASE**, and will be assigned an extension number.
5. Your expansion Handset is ready for use.

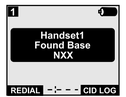

Answering System

Turn Answering System On/Off
Press **ON/OFF** to turn the system on or off. When the system is turned on, the light inside the button will glow steadily.

For details on recording your own outgoing announcements and changing system settings, see **ANSWERING SYSTEM OPERATION** in your User's manual.

Set the Clock

1 Make sure the answering system is on.
2 Press **TIME/SET**. The system announces the clock setting, then announces "To set Date and Time, press **TIME/SET**."
3 Press **TIME/SET**.
4 Press ***CHANGE*** until the system announces thecorrect day, then press **TIME/SET**.
5 Press **CHANGE** until the system announces the correct hour, then press **TIME/SET**.
6 Press **CHANGE** until the system announces the correct minutes, then press **TIME/SET**. The system announces the current clock setting.

NOTE: You can press and hold change to advance the minutes by ten.

96-5652-30-00.P65 2